

# **AC SCHNITZER**

## **-Montageanleitung- Designstreifen Set - M2 (G87) -**



**5114 387 510 / -5108**  
*(english version see page 13)*

# Allgemeine Hinweise!



## AC Schnitzer Designstreifen – M2 (G87) –

### Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keine Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

### Montage

Vor Montage Fahrzeug Oberwäsche durchführen, wobei keine rückfettenden Mittel verwendet werden dürfen.

Bei der Montage sollte das Fahrzeug auf einer ebenen Fläche stehen (nicht auf einer Hebebühne) !

Unmittelbar vor der Verklebung die zu beklebenden Stellen mit Silikonentferner abwaschen, damit Silikon-, Fett und Ölrückstände sicher entfernt werden.

Die optimale Lufttemperatur und Temperatur der Fahrzeugoberfläche zur Aufbringung der Designstreifen beträgt 18°C ~ 22°C.

Bei Temperaturen unterhalb 18°C tritt nur eine bedingte Haftung ein. Deshalb muss die untere Temperaturgrenze von 18°C unbedingt eingehalten werden.

Wenn die Lufttemperatur und /oder die Temperatur der Fahrzeugoberfläche während des Aufbringens zu hoch sind, kann die Anfangshaftung zu stark sein und dazu führen, dass der Designstreifen beim Lösen von der Trägerfolie materialbedingt überdehnt und Lufteinschlüsse nicht richtig entweichen können.

Um eine ausreichende Verklebung zwischen der Folie und dem Fahrzeug zu erreichen, darf das Fahrzeug **24 Stunden** nach dem Aufbringen der Designstreifen keinem kalten oder nassen Klima ausgesetzt werden.

Waschanlagenbetrieb erst nach **72 Stunden** zulässig !

**Auf keinen Fall darf der AC Schnitzer Designstreifen mit Lackpolitur oder scharfen Reinigungsmitteln jeglicher Art in Kontakt kommen ! Bitte informieren Sie Ihren Kunden eingehend.**

### Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **12 AW**

# Gelieferte Bauteile



AC Schnitzer Designstreifen – M2 (G87) –

A

R

L



**Set 1x**

Montageanleitung Nr.: 5114 387 510 -5108 / Stand: 19.06.2024 / Tsch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688-130

## AC Schnitzer Designstreifen – M2 (G87) –

B



**1x**

C



**1x**

A AC Schnitzer Designstreifen Set (Art.Nr.: 5114 387 510 silber)  
(Art.Nr.: 5114 387 5108 schwarz)

B AC Schnitzer Schriftzug Heck in silber oder schwarz

C Rakel mit Filzlippe

# Montageanleitung

**AC  
SCHNITZER**

## AC Schnitzer Designstreifen – M2 (G87) –

### Montage der AC Schnitzer Designstreifen



Die Lackoberfläche muss frei von Silikon, Politur und Fettrückständen sein.

Montagehinweise auf Seite 2 beachten !



**Abb. 1**

Der AC Schnitzer Designstreifen wird durchgehend von hinten nach vorne verklebt.



**Abb. 2 bis 4**

AC Schnitzer Designstreifen oberhalb der Seitenwand.- Tür.- und Kotflügelkontur, wie abgebildet, anlegen und mit Klebeband fixieren.




## AC Schnitzer Designstreifen – M2 (G87) –

Montage ...

### Abb. 5

Tankklappe mit Klebeband an Seitenwand fixieren.


Die Tankklappe darf während des Verklebens sich nicht öffnen lassen !

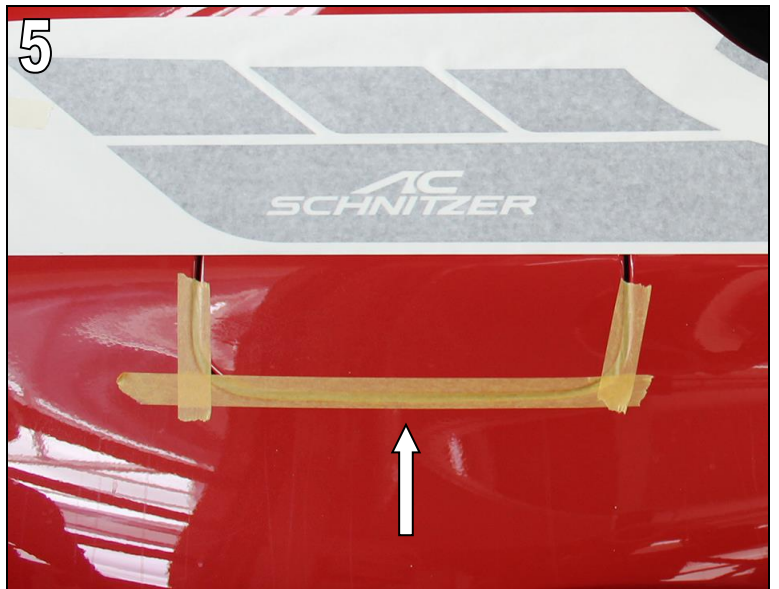

### Abb. 6

AC Schnitzer Designstreifen mit dem Konturen – Hilfsaufkleber an der Seitenscheibe, wie abgebildet, ausrichten.

AC Schnitzer Designstreifen mit Klebeband fixieren.

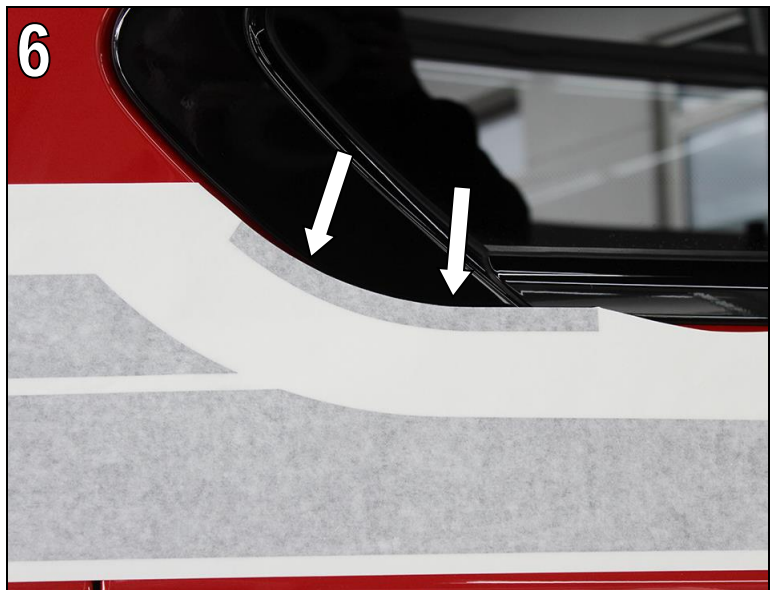

### Abb. 7 & 8

AC Schnitzer Designstreifen mit der unteren Kante der Trägerfolie an der Fahrzeugkontur, wie abgebildet, ausrichten.

AC Schnitzer Designstreifen mit Klebeband fixieren.



## AC Schnitzer Designstreifen – M2 (G87) – Montage ...



### Abb. 9 & 10

Trägerfolie des AC Schnitzer Designstreifens Stück für Stück vom AC Schnitzer Designstreifen, wie abgebildet, trennen und Trägerfolie abschneiden.





## AC Schnitzer Designstreifen – M2 (G87) – Montage ...



**Abb. 11 & 12**

AC Schnitzer Designstreifen an der **Seitenscheibenkontur** und **Seitenwandkontur**, nach hinten, ausrichten und mit dem zuvor angebrachten Klebeband fixieren.

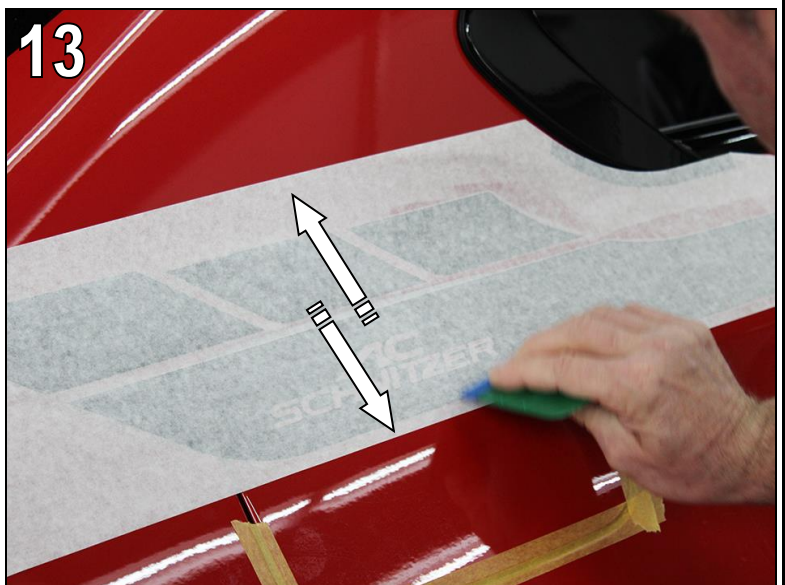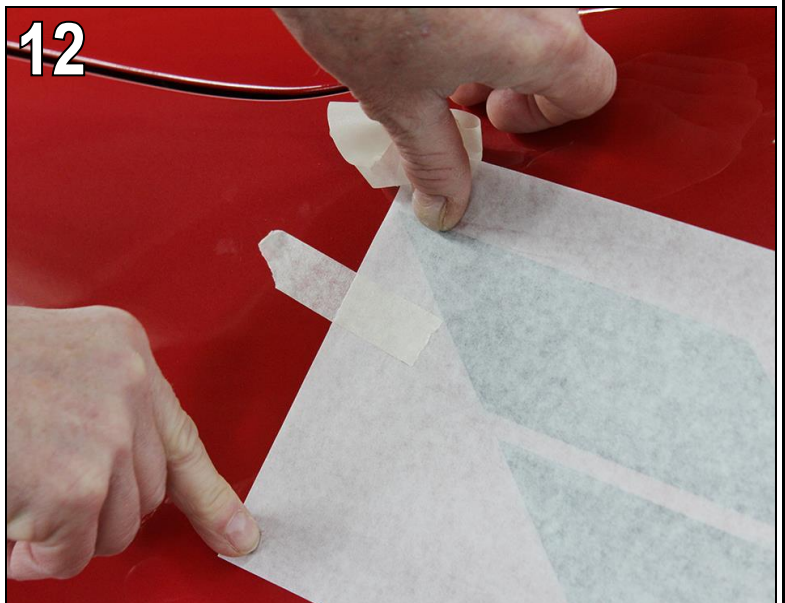

**Abb. 13**

Mit der Filzseite des mitgelieferten Kunststoffrakels den AC Schnitzer Designstreifen am Fahrzeug andrücken.

### Hinweis !

**Nur nach oben und unten andrücken.  
Nicht in Längsrichtung.**

Bei übermäßigem Druck auf das Rakel kann sich der Designstreifen überdehnen.



## AC Schnitzer Designstreifen – M2 (G87) –

Montage ...



**Abb. 14 & 15**

Schutzfolie des AC Schnitzer Designstreifens Stück für Stück vorsichtig nach unten wegziehen.



**Abb. 16 & 17**

AC Schnitzer Designstreifen an der Kontur der Tür und des Kotflügels, parallel zur Seitenwand ausrichten und nach Arbeitsschritt **Abb.13** aufkleben.

## AC Schnitzer Designstreifen – M2 (G87) –

Montage ...



### Abb. 18 & 19

In der Tankklappe und den Türspalten den AC Schnitzer Designstreifen mit einem Cuttermesser vorsichtig zuschneiden und überschüssiger Designstreifen entfernen.



## AC Schnitzer Designstreifen – M2 (G87) –

Montage ...

### Abb. 20

Auf der linken Seite der Heckklappe, wie abgebildet, den mitgelieferten AC Schnitzer Schriftzug Heck aufkleben.

Dazu...

Die Trägerfolie des AC Schnitzer Schriftzugs Heck entfernen und AC Schnitzer Schriftzug Heck entlang der Heckklappenkontur ansetzen und mit dem Kunststoffilz Raker am Fahrzeug andrücken.

Schutzfolie vorsichtig abziehen.

Um eine ausreichende Verklebung zwischen der Folie und dem Fahrzeug zu erreichen, darf das Fahrzeug **24 Stunden** nach dem Aufbringen des Designstreifens keinem kalten oder nassen Klima ausgesetzt werden.

Waschanlagenbetrieb nach **72 Stunden** zulässig !



*Irrtum und Änderung sowie technische Weiterentwicklung vorbehalten !*



# **AC SCHNITZER**

**-Fitting Instructions-**

**Design strips set**

**- M2 (G87) -**



**5114 387 510 / -5108**

# General Notes !



## AC Schnitzer Design strips set – M2 (G87) –

### Important notes !

These installation instructions must be read before starting installation work. AC Schnitzer accepts no liability for damage caused by incorrect installation!

These installation instructions are intended for use by authorised AC Schnitzer dealers.

The target group for these installation instructions is in all cases specialist personnel trained on BMW vehicles with the appropriate expertise.

### Fitting

Carry out a top wash of the vehicle before fitting, whereby no regreasing agents may be used.

During installation, the vehicle should be on a level surface (not on a lift) !

Immediately before bonding, wash the areas to be bonded with silicone remover so that silicone, grease and oil residues are safely removed.

The optimum air temperature and temperature of the vehicle surface for applying the design strips is 18°C ~ 22°C.

At temperatures below 18°C, adhesion is limited. Therefore, the lower temperature limit of 18°C must be strictly adhered to.

If the air temperature and/or the temperature of the vehicle surface are too high during application, the initial adhesion may be too strong and cause the design strip to overstretch when it is removed from the carrier film due to the material and air pockets may not be able to escape properly.

In order to achieve sufficient adhesion between the film and the vehicle, the vehicle must not be exposed to must not be exposed to a cold or wet climate for **24 hours** after the design strips have been applied.

Car wash operation is only permitted after **72 hours** !

**Under no circumstances should the AC Schnitzer design strip come into contact with paint polish or harsh cleaning agents of any kind! Please inform your customer in detail.**

### Fitting time (1 unit = 5 minutes)

The fitting time is **12 unit**

# Supplied Components



AC Schnitzer Design strips set – M2 (G87) –

A

R

L



**set 1x**

Fitting Instructions No: 5114 387 510 -5108 / Issue: 19.06.2024 / Tsch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688-130

# Supplied Components



AC Schnitzer Design strips set – M2 (G87) –

B



**1x**

C



**1x**

**A** AC Schnitzer Design strips set (parts.no: 5114 387 510 silver)  
(parts no: 5114 387 5108 black)

**B** AC Schnitzer rear sticker at silver or black

**C** Squeegee with felt lip



# Fitting Instructions



## AC Schnitzer Design strips set – M2 (G87) –

### Fitting the Design strips set



The paint surface must be free of silicone, polish and grease residues.

Follow the installation instructions on page 2 !



**Fig. 1**

The AC Schnitzer design strip is glued continuously from the rear to the front.

**Fig. 2 until 4**

Apply AC Schnitzer design strips above the side panel, door and fender contours as shown and fix in place with adhesive tape.

# Fitting Instructions




## AC Schnitzer Design strips set – M2 (G87) –

Fitting ...

**Fig. 5**

Fix the fuel filler flap to the side wall with adhesive tape.


It must not be possible to open the fuel filler flap during not be able to be opened !

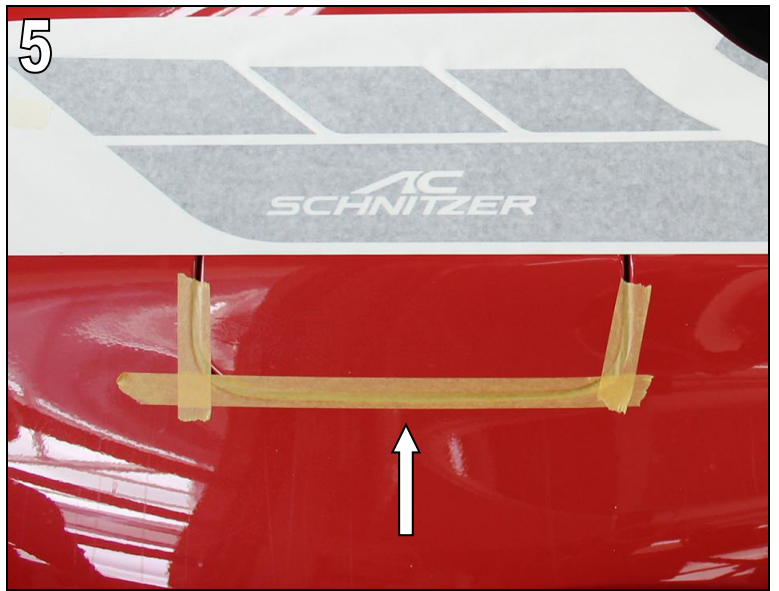

**Fig. 6**

Align AC Schnitzer design strips with the contour sticker on the side window as shown.

Fix AC Schnitzer design strips with adhesive tape.

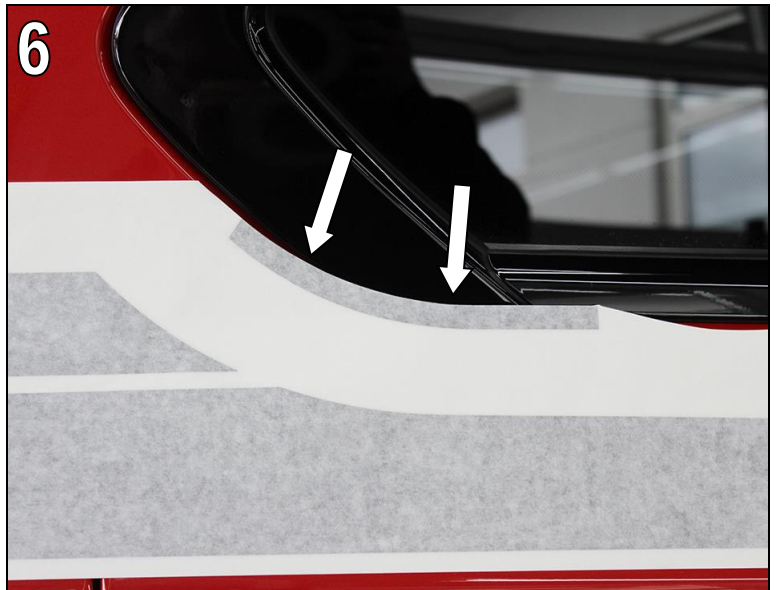

**Fig. 7 & 8**

Align AC Schnitzer design strips with the lower edge of the carrier film on the vehicle contour as shown.

Fix AC Schnitzer design strips with adhesive tape.



# Fitting Instructions

## AC Schnitzer Design strips set – M2 (G87) –

Fitting ...



**Fig. 9 & 10**

Separate the backing film of the AC Schnitzer design strip piece by piece from the AC Schnitzer design strip as shown and cut off the backing film.



# Fitting Instructions


## AC Schnitzer Design strips set – M2 (G87) –

Fitting ...



**Fig. 11 & 12**

Align the AC Schnitzer design strips on the **side window** contour and **side panel** contour to the rear and fix in place with the previously applied adhesive tape.

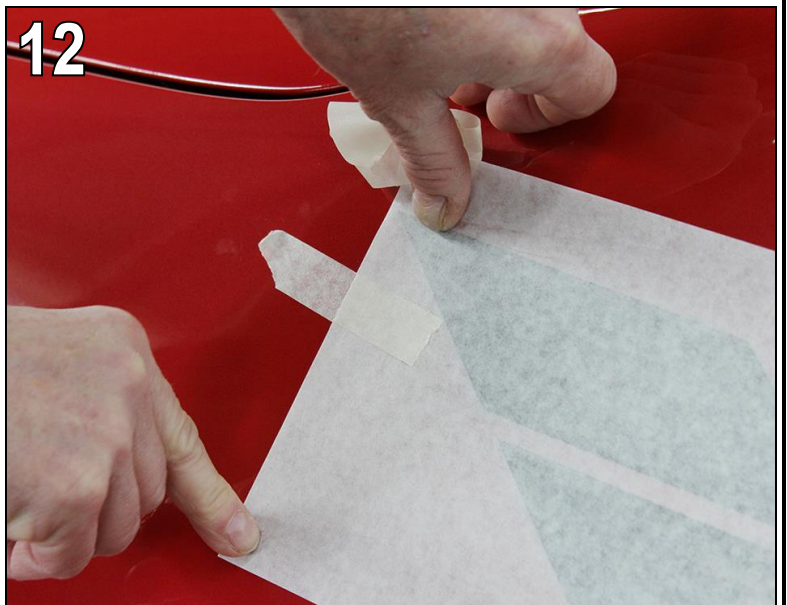


**Fig. 13**

Use the felt side of the plastic squeegee supplied to press the AC Schnitzer design strip onto the vehicle.

**Note !**

**Only press upwards and downwards.  
Not in the longitudinal direction.**

Excessive pressure on the squeegee can cause the design strip to overstretch.

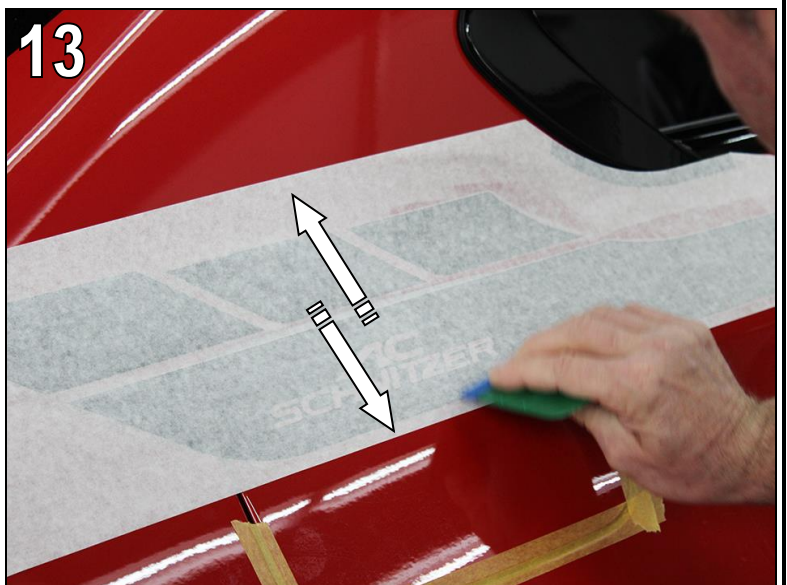

# Fitting Instructions

## AC Schnitzer Design strips set – M2 (G87) –

Fitting ...



**Fig. 14 & 15**

Carefully pull the protective film of the AC Schnitzer design strip downwards piece by piece.



**Fig. 16 & 17**

Align AC Schnitzer design strips to the contour of the door and fender, parallel to the side panel, and stick on as shown in *Fig. 13*.

# Fitting Instructions

**AC  
SCHNITZER**

AC Schnitzer Design strips set – M2 (G87) –

Fitting ...



**Fig. 18 & 19**

Carefully cut the AC Schnitzer design strip to size in the fuel filler flap and door gaps using a cutter knife and remove excess design strip.



Fitting Instructions No: 5114 387 510 -5108 / Issue: 19.06.2024 / Tsch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688-130

# Fitting Instructions

**AC  
SCHNITZER**

## AC Schnitzer Design strips set – M2 (G87) –

Fitting ...

### Fig. 20

Stick the supplied AC Schnitzer rear lettering on the left-hand side of the tailgate, as shown.

To do...

Remove the backing film from the AC Schnitzer rear lettering and apply the AC Schnitzer rear lettering along the tailgate contour and press onto the vehicle with the plastic felt squeegee.

Carefully remove the protective film.

In order to achieve sufficient adhesion between the film and the vehicle, the vehicle must not be exposed to cold or wet weather for **24 hours** after the design strip has been applied.

Car wash operation permitted after **72 hours** !



*Errors and omissions excepted  
reserved !*

Fitting Instructions No: 5114 387 510 -5108 / Issue: 19.06.2024 / Tsch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688-130

